

FITTING INSTRUCTIONS TO BE FITTED BY A QUALIFIED TECHNICIAN



THIS SHEET INCLUDES FITTING INSTRUCTIONS FOR THE FOLLOWING PARTS:

Secondary Alternator Cover Part No. EC-F4-2012-1-GBR / Secondary Clutch Cover Part No. EC-F4-2012-2-GBR



SECONDARY ALTERNATOR COVER PART NO. EC-F4-2012-1-GBR

- 1 Remove the middle fairing section using the 9 Zeus fastners.
- 2 Remove the 4 existing bolts from the stock aluminium Alternator cover, shown as position Bolt 1, 2, 3 & 4.
- 3 Place the Secondary Alternator Cover over the stock aluminium cover.
- 4 Loosely screw down all bolts using the supplied M6 x 30mm replacement bolts.
- 5 Tighten bolts to a Torque of 11 Nm as per Manufacturer's recommendations. DO NOT OVERTIGHTEN.
- Refit the Fairing.







SECONDARY CLUTCH COVER PART NO. EC-F4-2012-2-GBR

- 1 Remove the RHS fairing panel via the Dzus fasteners.
- 2 Remove 4 existing bolts from the stock Clutch cover, shown as position Bolt 1, 2, 3 & 4.
- 3 Place the Secondary Clutch Cover over the stock cover.
- 4 Assemble 4 replacement bolts loosely in the correct position as shown.
- 5 Tighten bolts to a Torque of 8 Nm as per manufacturer's recommendations.
- Replace fairing panel.
 DO NOT OVERTIGHTEN.



